USER'S MANUAL

DVD KARAOKE PLAYER

AR-909SD
AR-909A

I. USE DVD KARAOKE PLAYER:

1. AR-909SD

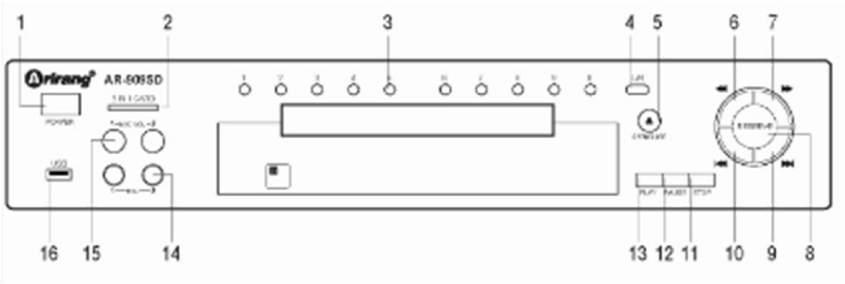

1. POWER: Power
2. 3 IN 1 CARD: Memory card slot
3. NUMBER: Number keys
4. L/R: Interrupt VCD sounds
5. OPEN/CLOSE: Load/eject disk tray
6. REW: Fast rewind
7. FWD: Fast forward
8. RESERVE: Store the selected song
9. NEXT: Next song
10. PREV: Previous song
11. STOP: Stop
12. PAUSE: Pause
13. PLAY: Play
14. MIC: Micro port
15. MIC VOL: Micro volume
16. USB: USB port

2. AR-909A

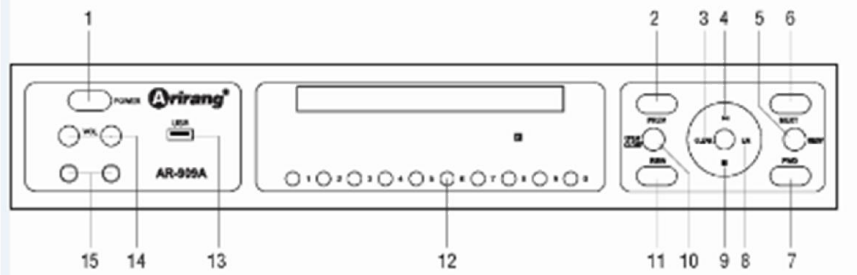

1. POWER: Power
2. PREV: Previous song
3. CLEAR: Delete the selected song
4. PLAY/PAUSE: Play/Pause
5. RESV: Store the selected song
6. NEXT: Next song
7. FWD: Fast forward
8. L/R: Interrupt VCD sounds
9. STOP: Stop
10. Open/Close: Load/eject the disk tray
11. REW: Fast rewind
12. NUMBER: Number keys
13. USB: USB port
14. MIC VOL: Micro volume
15. MIC: Micro port

II. USING THE REMOTE CONTROL

1. Installing and removing battery:

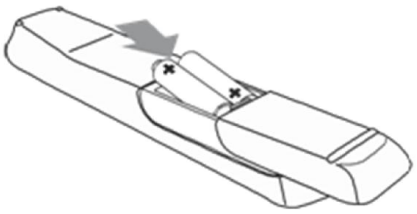

Insert 2 AA batteries into remote control

Make sure for installing in right polarity +/-

2. Position of keys on the remote control:

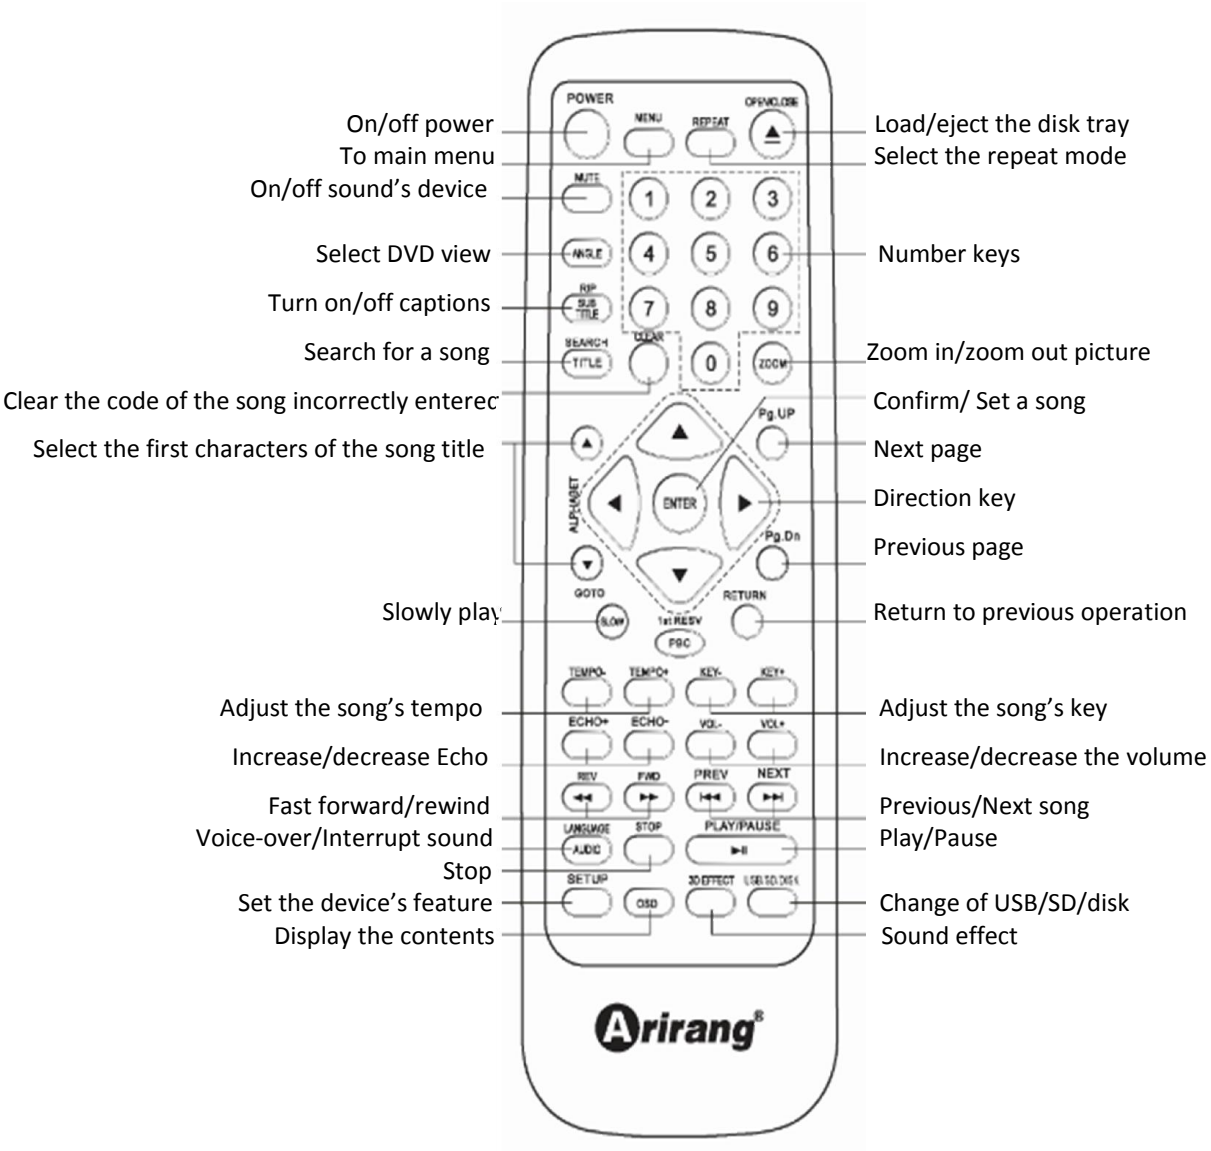

A- ACCESSORIES

Remote control



2 AA batteries

Audio cable

Video cable

Song book

Karaoke disk

User's manual

B- CONNECTION WITH TV AND AMPLIFIER

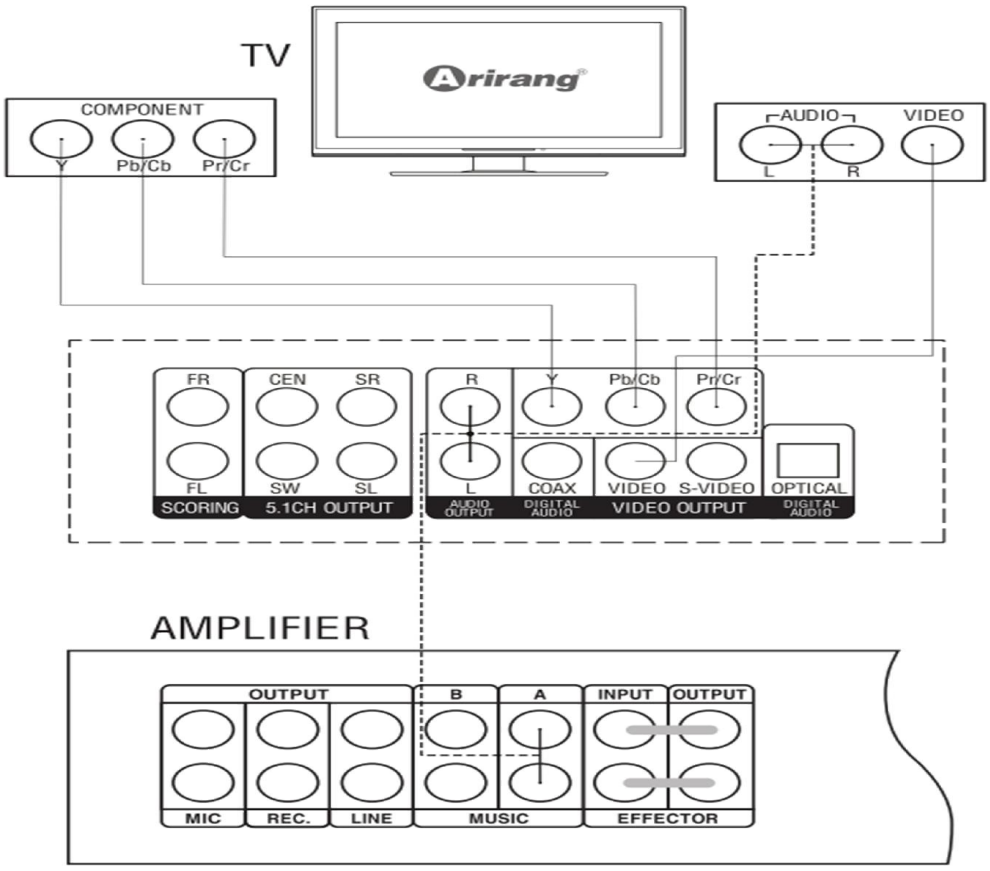

C- PLAY MASECO MIDI VISION KARAOKE DISK

1. Select the song:

1.1 Use song book attached with the device

Press number keys to select the song

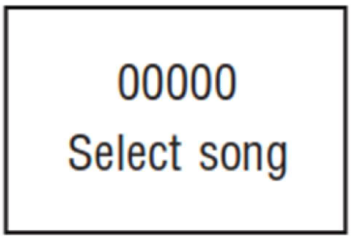

Corresponding to the selected number, the song will be displayed

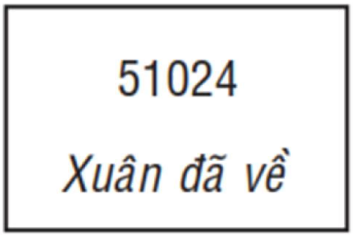

Press <ENTER> key to store song to list in order

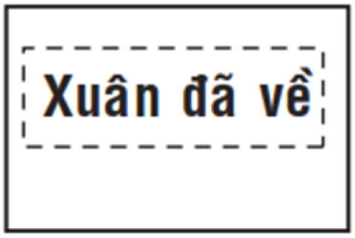

1.2 Use the search menu on device

Press <TITLE> key to enter the search menu

VIETNAM
CHINA
ENGLISH
PHILIPINE
50650 AI BIẾT
50070 AI CHO EM TÌNH YÊU
50012 AI CHO TÔI TÌNH YÊU
50210 AI LÊN XỨ HOA ĐÀO
52859 AI ĐI NGOÀI SƯƠNG GIÓ
50038 AI ĐƯA EM VỀ
0 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

- Press ▲▼ key to select the song
- Press ◀▶ key to select the language
- Press <ENTER> key to store the selected song
- Press <GOTO> key to select the song according to the alphabet

2. Delete the song:

Press <CANCEL> key to delete the selecting song

Press <STOP> ■ to stop the playing song, press CANCEL to delete the next song

3. Adjust tempo:

Press <TEMPO> +/- key to adjust tempo of the song

4. Adjust tone:

Press <KEY> +/- to adjust the pitch of the song

D- PLAY DVD, SVCD, VCD, CD, MP3, MP4, EVD DISK

1. <SUBTITLE>: Select secondary language
2. <VOL> +/-: Adjust the volume of song
3. <PLAY>: Play
4. <PAUSE>: Pause
5. <AUDIO/Language>: Select the voice-over language
6. <REW>: Fast rewind
7. <FWD>: Fast forward
8. <PREV>: To previous song
9. <NEXT>: To next song

E- NOTE:

1. Please read this manual thoroughly before using.
2. To ensure electrical safety, do not open the device cover.
3. Keep away from water, humid and very hot places.
4. Clean with soft towel without using any highly corrosive chemicals.
5. Turn off power source when the device is not in use; unplug the device when it is not used for a long time.